


STARTER WIRING—WEG SINGLE PHASE

WARNING: STARTER MUST ONLY BE INSTALLED BY A LICENSED ELECTRICIAN IN ACCORDANCE TO STATE ELECTRICAL CODES.

NOTE: OUTSIDE POWER LEADS WIRED TO 1L1 & 3L2 WITH GREEN TO GROUND SCREW.

TOP

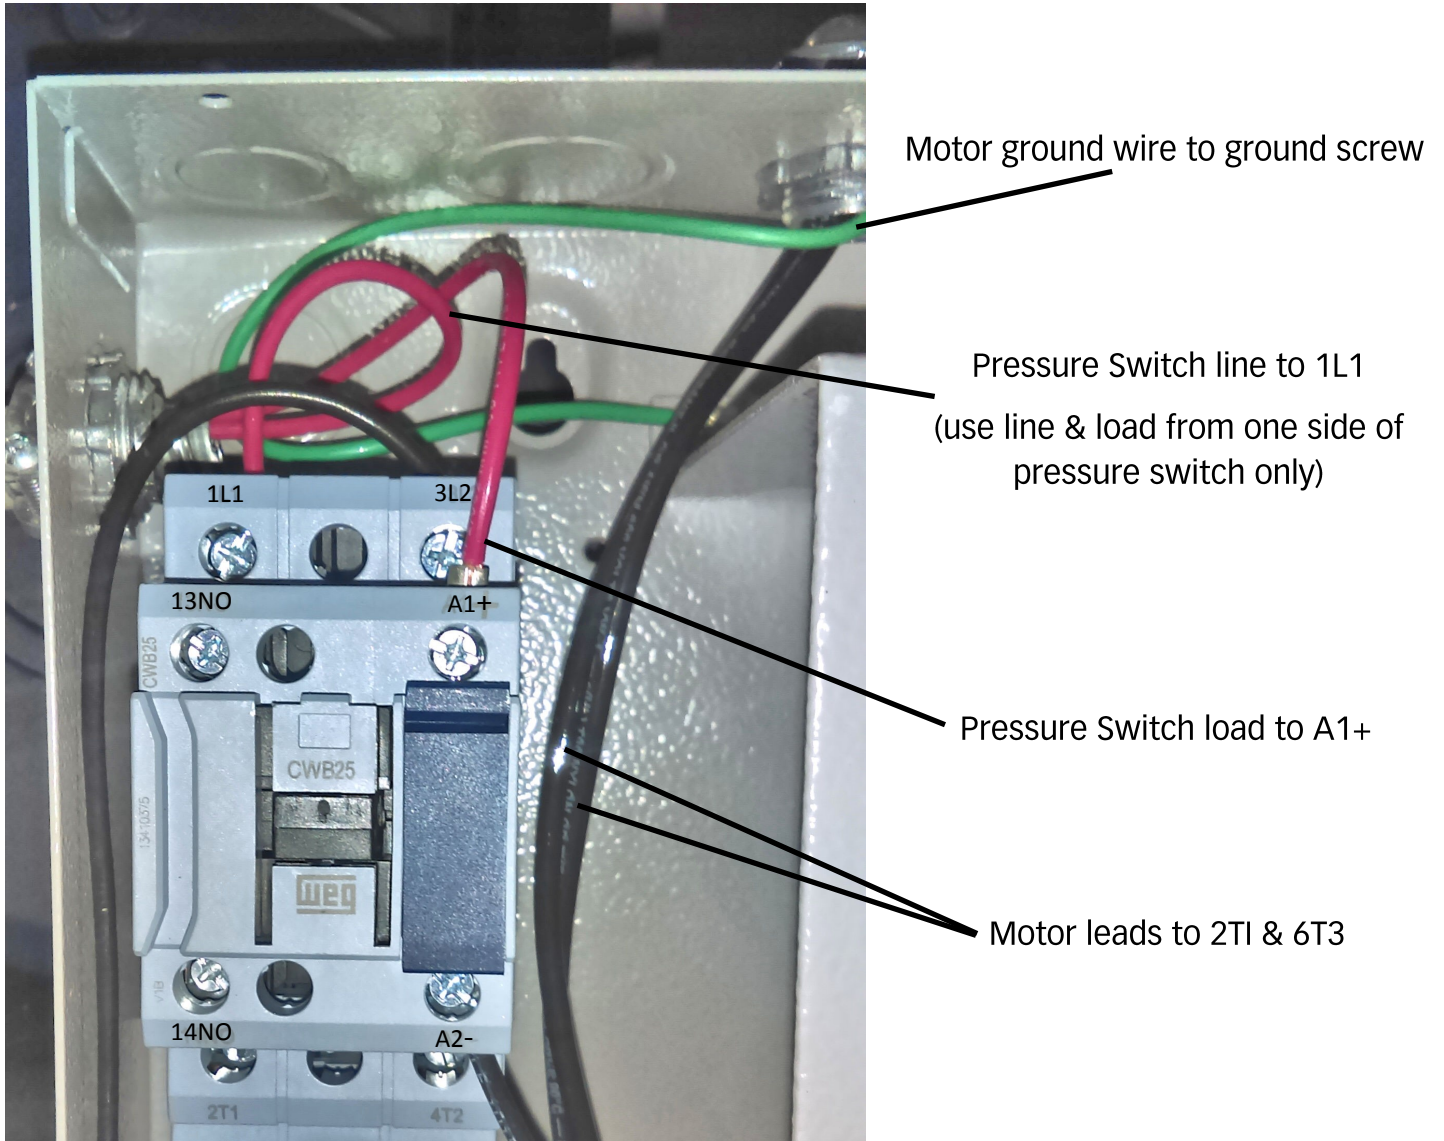

*Constant speed units without a pressure switch require a jumper wire from 1L1 to A1.

BOTTOM



Jumper Wire 3L2 to 96NC

Jumper Wire A2- to 95NC

Motor leads to 2T1 & 6T3